


## Measuring – Drapery Hardware

Measure the width of your window treatments, allowing for hardware to mount on the wall or directly on the window trim.

Allow 6" on each side of the window for blackout.

Always consider extra wall space that may be needed for decorative finials. Since the rod dimensions do not include the additional width added by the finial.

To make the windows appear larger, mount the drapery rod 6" above the trim and allow the rod width to extend 6" beyond the window's actual width.

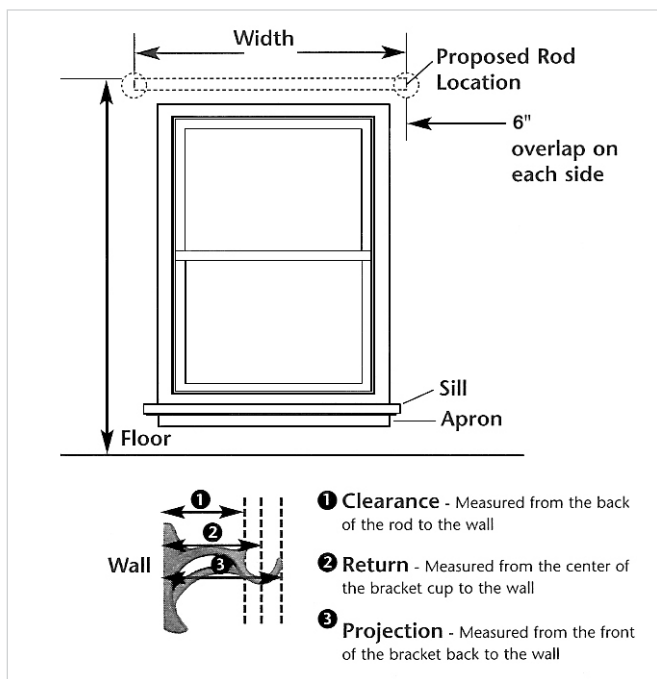

## Measuring – Draperies

The length of the drapery panel will depend on the look desired. Choose for the drapery to end at the sill, below the sill, at the floor or in a puddle on the floor.

There are two options for drapery fullness:

- Standard - drapery extends the width of the window x 2
- Full - drapery extends the width of the window x 2 1/2

The top of the drapery should be placed about 6" above the glass, so that the backs of the pleats cannot be seen from the outside of the window.

## Layered Treatments

The window-side of the treatment should be 1/2" shorter than the room-side drapery so that the under treatment does not show at the bottom.

## Installation Notes:

1. Brackets should be installed securely into wall's studs whenever possible. We recommend using a professional installer.
2. Brackets should be placed every 18". We do not recommend installing brackets with a distance between them greater than 18".
3. Drapery rods can be spliced together using connector screws or rod splices. Plan the location of the spliced rod so that it can be placed behind a bracket.